


Mark center of door thickness for hole diameter $\frac{7}{8}$ " (22mm) or 1" (25mm) for circular drive-in.

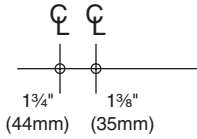

INGERSOLL-RAND
ARCHITECTURAL HARDWARE


© 1996 Schlage Lock Co.
Printed in USA 6/96
P513-593
F10/F40/F51

SCHLAGE® TEMPLATE


F-Series universal backset
adjusts for either $2\frac{3}{8}$ "
or $2\frac{3}{4}$ " backsets.

Important: Place template
on high edge of door bevel.

Recommended height
from center of lock to floor
is 38" (96.5cm) and to center
of deadbolt is 4" (10cm)

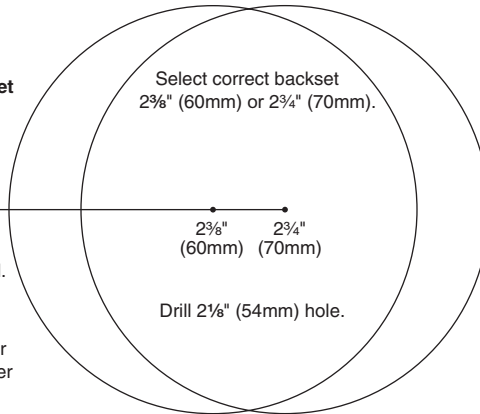

Marque el centro
del espesor de la
puerta. Para agujero
de 22mm ó 25mm
para entrada circular.




Tracez le point central
de l'épaisseur de la porte.
Pour trou de 22mm ou
25mm pour unité
circulaire à fixation rapide.

SCHLAGE® Plantilla Gabarit

Importante: Coloque la plantilla sobre
el borde alto del bisel de la puerta.
La altura recomendada desde el
centro de la cerradura hasta el
suelo es 96,5cm, y hasta el
centro del pasador es 10cm.

Important: Placez le gabarit
sur le côté de l'arête supérieure
d'une porte à chanfrein.
La hauteur recommandée du
milieu de la serrure jusqu'au
sol est de 96,5cm, et jusqu'au milieu
du pêne dormant elle est de 10cm.

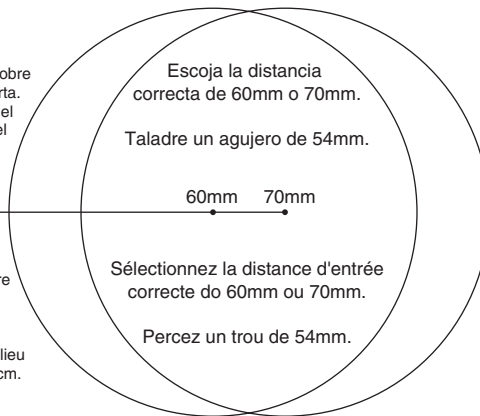

Doble sobre el borde de la puerta. A piler sur l'arête de la porte.