


Mark center of door thickness for hole diameter  $\frac{7}{8}$ " (22mm) or 1" (25mm) for circular drive-in.

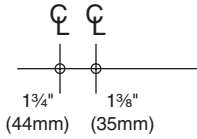

**INGERSOLL-RAND**  
ARCHITECTURAL HARDWARE


© 1996 Schlage Lock Co.  
Printed in USA 6/96  
P513-593  
F10/F40/F51

## SCHLAGE® TEMPLATE


**F-Series universal backset  
adjusts for either  $2\frac{3}{8}$ "  
or  $2\frac{3}{4}$ " backsets.**

Important: Place template  
on high edge of door bevel.

Recommended height  
from center of lock to floor  
is 38" (96.5cm) and to center  
of deadbolt is 4" (10cm)

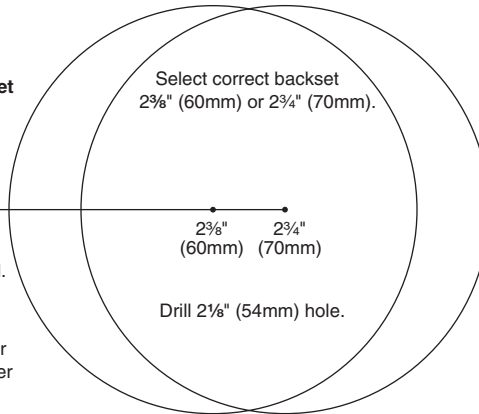

Marque el centro del espesor de la puerta. Para agujero de 22mm ó 25mm para entrada circular.



Tracez le point central de l'épaisseur de la porte. Pour trou de 22mm ou 25mm pour unité circulaire à fixation rapide.

Doble sobre el borde de la puerta. A piler sur l'arête de la porte.

## SCHLAGE® Plantilla Gabarit

Importante: Coloque la plantilla sobre el borde alto del bisel de la puerta. La altura recomendada desde el centro de la cerradura hasta el suelo es 96,5cm, y hasta el centro del pasador es 10cm.

Important: Placez le gabarit sur le côté de l'arête supérieure d'une porte à chanfrein. La hauteur recommandée du milieu de la serrure jusqu'au sol est de 96,5cm, et jusqu'au milieu du pêne dormant elle est de 10cm.

