Mark center of door thickness for hole diameter ⅞" (22mm) or 1" (25mm) for circular drive-in.



INGERSOLL-RAND
ARCHITECTURAL HARDWARE

© 1996 Schlage Lock Co.
Printed in USA 6/96
P513-593
F10/F40/F51

Fold on door edge.

SCHLAGE®

TEMPLATE

F-Series universal backset adjusts for either 2⅜" or 2¾" backsets.

Important: Place template on high edge of door bevel.

Recommended height from center of lock to floor is 38" (96.5cm) and to center of deadbolt is 4" (10cm)

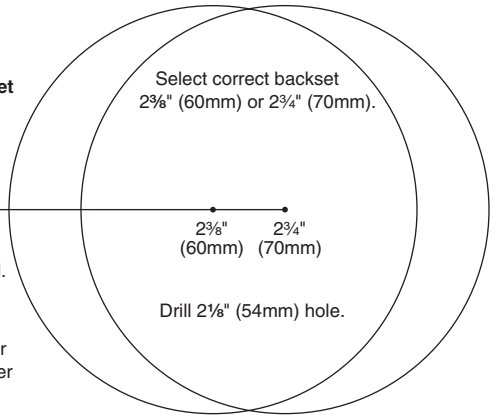

Marque el centro del espesor de la puerta. Para agujero de 22mm ó 25mm para entrada circular.



Tracez le point central de l'épaisseur de la porte. Pour trou de 22mm ou 25mm pour unité circulaire à fixation rapide.

A plier sur l'arête de la porte.
Doble sobre el borde de la puerta.

SCHLAGE®

Plantilla
Gabarit

Importante: Coloque la plantilla sobre el borde alto del bisel de la puerta. La altura recomendada desde el centro de la cerradura haste el suelo es 96,5cm y hasta el centro del pasador es 10cm.
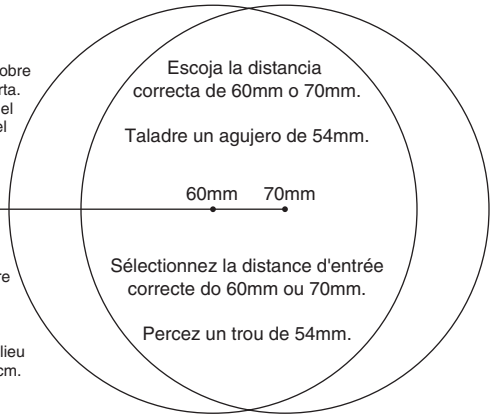
Important: Placez le gabarit sur le côté de l'arête supérieure d'une porte à chanfrein. La hauteur recommandée du milieu de la serrure jusqu'au sol est de 96,5cm, et jusqu'au milieu du pêne dormant elle est de 10cm.